

ARGENTO WOVEN BAR STOOL ASSEMBLY INSTRUCTIONS

COMPONENTS

 Seat Assembly Quantity: 1









③ Stretcher




HARDWARE

Short Machine Bolt Quantity: 4







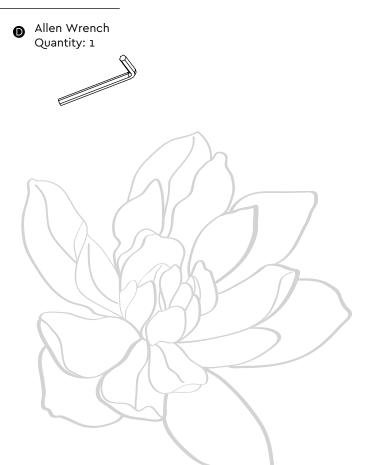

Thoughtful Design MADE RIGHT

INSTRUCTIONS

STEP 1


Line up Bar Stool Seat Assembly ① onto Leg Assembly ② to the pre drilled holes on the seat assembly as shown.

Note: Curved part of leg assembly lines up with the back of the chair.




STEP 3

Next, insert the Stretcher ③as shown and secure using the 18 mm bolts ^③ provided.

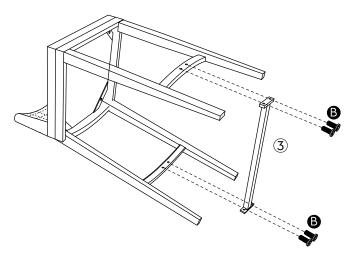


STEP 4

Tighten all four bolts with the allen wrench provided

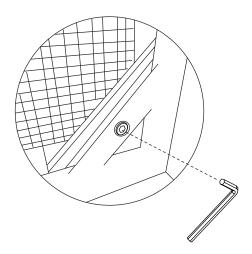

STEP 2

Place washer **O** on bolt **O**. Next, hand tighten bolts into the pre drilled holes in the corner. Repeat for all corners.

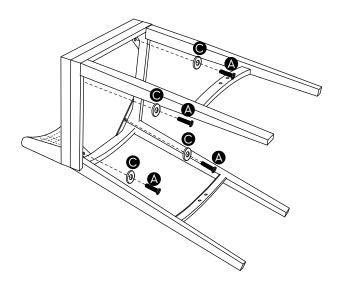

Step 3 Detail

