




HARDWARE

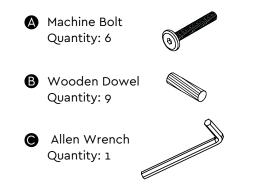




Thoughtful Design MADE RIGHT

15 Kingbrook Parkway, Suite 100 Simpsonville, KY 40067 p. 877.866.3331 f. 502.719.8888 oxfordgarden.com

INSTRUCTIONS


STEP 1

Insert tenons of seat assembly 4 into mortises of arm & leg frames 1. Left and right angled tenons connect to the BACK LEGS.

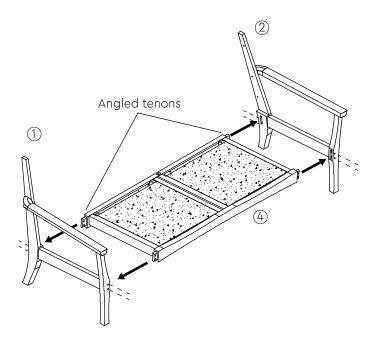

STEP 2

Remove center dowel from back seat rail. Insert backrest ③ into assembly, aligning with the top of arm & leg frame top. Attach with 6 machine bolts and tighten firmly.

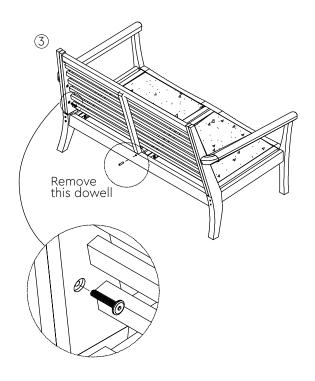

STEP 3

Insert dowel plugs into all 4 legs and center back rail. Push in firmy until flush with surface.

