


SIENA OTTOMAN - SOTT

ASSEMBLY INSTRUCTIONS



COMPONENTS


1 Foot Rest Quantity: 1







HARDWARE



FINISHING ITEMS

Medium Grit Sandpaper

NOTE: If the furniture is going to be placed on a concrete or tile patio, it should first be rinsed well to remove the sawdust that may cause some staining.


NOTE: A hammer (not provided) will be needed for the assembly of this ottoman.

Thoughtful Design MADE RIGHT

INSTRUCTIONS


STEP 1

On a clean flat surface, lay the leg assembly2 on its side mortise holes facing up. Line up the foot rest 1, and insert into the leg assembly.

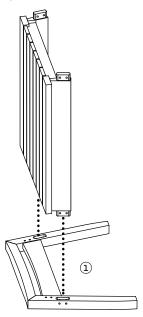

STEP 3

With a hammer, drive 8 total dowels (a) into the predrilled holes on the front and rear of the leg assemblies (1). Insert the tapered end of the dowels first. NOTE: The dowels should be easily driven in flush. If there is strong resistance, do not force the dowel. Sand to smooth off areas around the dowel pins. Your ottoman is now ready to enjoy!

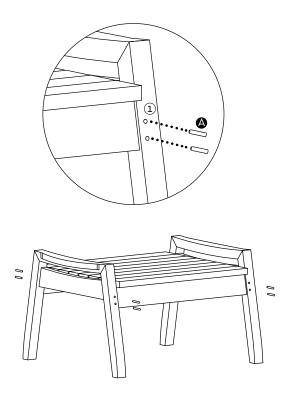

STEP 2

Line up and place leg assembly ② onto those parts already assembled.

